


## ***Installation Instructions and Safety Information***

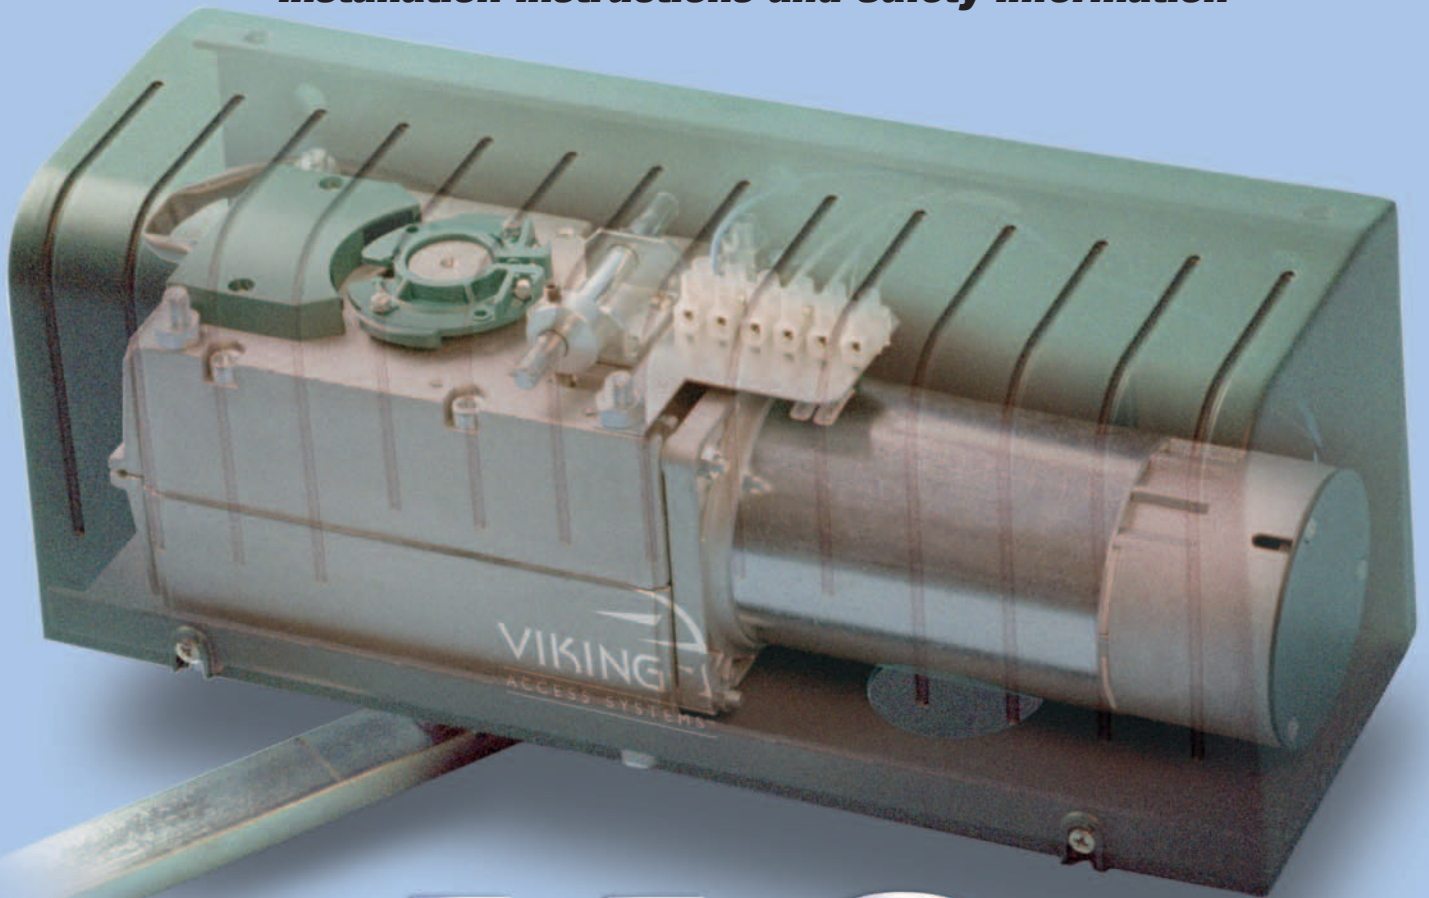

# **X-9**

***Vehicular Gate Operator***

***UL 325 and UL991 Listed***

***Class I, Class II, Class III and Class IV***




# PARTS DIAGRAM


**WARNING - For Installation  
By Qualified Personnel Only.**

| Item | Description               | Part No. |
|------|---------------------------|----------|
| 1    | Cover, Plastic            | VAX9PC   |
| 2    | Motor/Gear Unit           | VAX9     |
| 3    | Chassis, Motor/Gear       | VAX9CH   |
| 4    | Strain Relief             | VAX9ST   |
| 5    | Arm Assembly, Articulated | VAX9AA   |
| 6    | Holder, Limit Switch      |          |
| 7    | Limit Switch (2)          | VAX9LS   |
| 8    | Cam, Limit Switch         | VAX9LCS  |
| 9    | Terminal Block            | VAX9TB   |
| 10   | Key Release               | VAX9KR   |

Weight 40 lb.

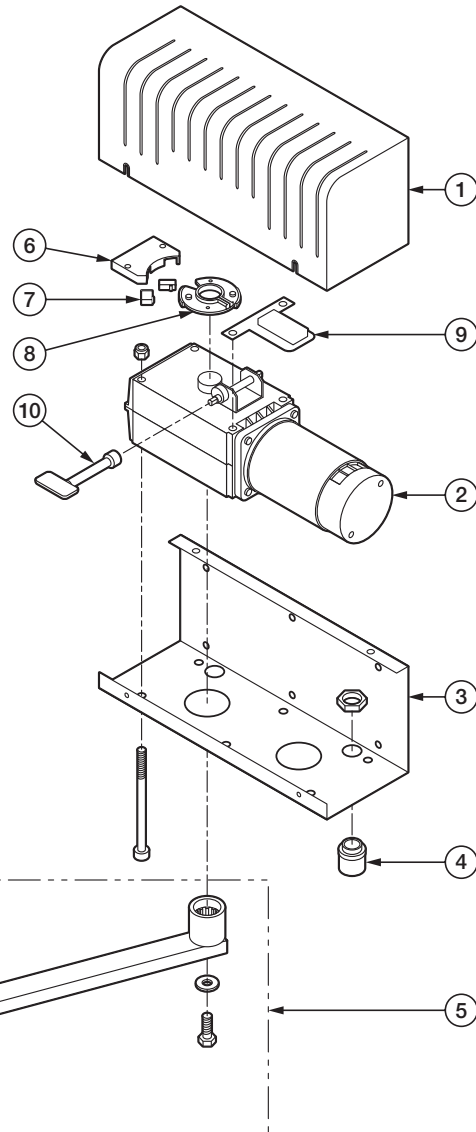

## Overall Dimensions

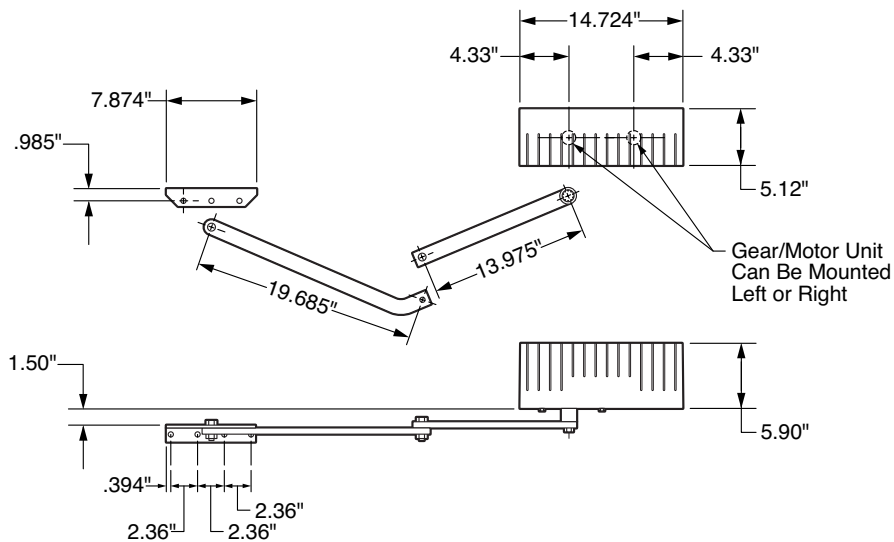

# TABLE OF CONTENTS

|  |       |
|--|-------|
| Parts Diagram/Parts List .....                                       | i     |
| <b>Important Safety Information</b>                                  |       |
| Important Safety Instructions .....                                  | 2     |
| Important Installation Instructions .....                            | 2-3   |
| Maintenance/General Safety Precautions .....                         | 4     |
| Terminology .....  | 5     |
| Photo Beam (non-contact sensor) Installation .....                   | 6     |
| Edge Sensor (contact sensor) Installation .....                      | 7     |
| Manual Release .....   | 7     |
| Audible Alarm Reset Switch Installation .....                        | 8     |
| Warning Placard Installation .....                                   | 8     |
| Important Installation Information .....                             | 9     |
| Specifications .....   | 9     |
| Plan of Installation – Open Inside .....                             | 10    |
| Plan of Installation – Open Outside .....                            | 11    |
| <b>Gate Operator Installation</b>                                    |       |
| Step 1 through 7 – Operator Installation .....                       | 13    |
| Step 8 through 9 – Limit Switch Setup .....                          | 14    |
| Opening/Closing Setup .....  | 15    |
| Reference Wiring Diagram; Limit Switch Connections .....             | 15    |
| Control Box Installation .....                                       | 16    |
| <b>Electrical Installation</b>                                       |       |
| Electrical Installation (120/220 VAC) .....                          | 17    |
| Single Unit Connections .....  | 18    |
| Master/Slave Connections .....                                       | 19    |
| <b>Vehicular Loop Detector Installation</b>                          |       |
| Loop Layout Diagrams .....   | 20    |
| Installation Guidelines .....  | 21    |
| <b>Accessory Connections</b>   |       |
| Open Commands; Safety Connections .....                              | 22    |
| Radio Receiver; Hold Open Timer .....                                | 23    |
| Magnetic Lock; Solenoid; Guard Station .....                         | 24    |
| <b>Special Features</b>  |       |
| Intelligent Obstruction Sensor (Primary Entrapment Protection) ..... | 25    |
| Gate Overlap Setting .....   | 27    |
| Troubleshooting .....  | 28-29 |



# **IMPORTANT SAFETY INFORMATION**

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## **IMPORTANT SAFETY INSTRUCTIONS**

WARNING – To reduce the risk of severe injury or death:

1. READ AND FOLLOW ALL INSTRUCTIONS.
2. Never let children operate or play with gate controls. Keep the remote control away from children.
3. Always keep people and objects away from the gate. **NO ONE SHOULD CROSS THE PATH OF THE MOVING GATE.**
4. Test the gate operator monthly. The gate **MUST** reverse on contact with a rigid object or when an object activates the non-contact sensors. After adjusting the force or the limit of travel, retest the gate operator. Failure to adjust and retest the gate operator properly can increase the risk of injury or death.
5. Use the manual release only when the gate is not moving.
6. **KEEP GATES PROPERLY MAINTAINED.** Read the owner's manual. Have a qualified service person make repairs to gate hardware.
7. The entrance is for vehicles only. Pedestrians must use separate entrance.
8. Every gate operator installation **MUST** have secondary protection devices against entrapment, such as edge sensors and photo beams more in particularly in places where the risk of entrapment is more likely to occur.
9. **SAVE THESE INSTRUCTIONS.**

## **IMPORTANT INSTALLATION INSTRUCTIONS**

1. Install the gate operator only when:
  - a) The operator is appropriate for the construction of the gate and the usage Class of the gate (refer to page 5),
  - b) All openings of a horizontal slide gate are guarded or screened from the bottom of the gate to a minimum of 4 feet (1.22 m) above the ground to prevent a 2-1/4 inch (57.2 mm) diameter sphere from passing through the openings anywhere in the gate, and in that portion of the adjacent fence that the gate covers in the open position,
  - c) **ALL EXPOSED PINCH POINTS ARE ELIMINATED OR GUARDED, AND**
  - d) **GUARDING IS SUPPLIED FOR EXPOSED ROLLERS.**
2. The operator is intended for installation only on gates used for vehicles. Pedestrians must be supplied with a separate access opening.
3. The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment. Swinging gates shall not open into public access areas.
4. The gate must be properly installed and work freely in both directions prior to the installation of the gate operator. Do not over-tighten the operator clutch or pressure relief valve to compensate for a damaged gate.



# IMPORTANT SAFETY INFORMATION

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## IMPORTANT INSTALLATION INSTRUCTIONS Continued

5. The gate operator controls must be placed so that the user has full view of the gate area when the gate is moving AND AWAY FROM THE GATE PATH PERIMETER,
6. Controls must be far enough from the gate so that the user is prevented from coming in contact with the gate while operating the controls. Controls intended to be used to reset an operator after 2 sequential activations of the entrapment protection device or devices must be located in the line-of-sight of the gate. Outdoor or easily accessible controls shall have a security feature to prevent unauthorized use.
7. All warning signs and placards must be installed where visible in the area of the gate. A minimum of two placards shall be installed. A placard is to be installed in the area of each side of the gate and be visible to persons located on the side of the gate on which the placard is installed.
8. For gate operators utilizing a non-contact sensor (Photo beam or like) in accordance with section 31.1.1 of the UL325 standard:
  - a) See instructions on the placement of non-contact sensors for each Type of application (refer to page 6),
  - b) Care shall be exercised to reduce the risk of nuisance tripping, such as when a vehicle, trips the sensor while the gate is still moving, and
  - c) One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier (refer to page 6).
9. For a gate operator utilizing a contact sensor (Edge sensor or like) in accordance with section 31.1.1 of the UL325 standard:
  - a) One or more contact sensors shall be located where the risk of entrapment or obstruction exists, such as at the leading edge, trailing edge, and post mounted both inside and outside of a vehicular horizontal slide gate (refer to page 7).
  - b) One or more contact sensors shall be located at the bottom edge of a vehicular vertical lift gate.
  - c) One or more contact sensors shall be located at the pinch point of a vehicular vertical pivot gate.
  - d) A hardwired contact sensor shall be located and its wiring arranged so that the communication between the sensor and the gate operator is not subjected to mechanical damage.
  - e) A wireless contact sensor such as one that transmits radio frequency (RF) signals to the gate operator for entrapment protection functions shall be located where the transmission of the signals are not obstructed or impeded by building structures, natural landscaping or similar obstruction. A wireless contact sensor shall function under the intended end-use conditions.
  - f) One or more contact sensors shall be located on the inside and outside leading edge of a swing gate. Additionally, if the bottom edge of a swing gate is greater than 6 inches (152 mm) above the ground at any point in its arc of travel, one or more contact sensors shall be located on the bottom edge (refer to page 7).
  - g) One or more contact sensors shall be located at the bottom edge of a vertical barrier (arm).



# IMPORTANT SAFETY INFORMATION

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## MAINTENANCE

Remove the Power Harness from the Control Board (refer to page 17)

- Clean and lubricate the turning pins and gate hinges using the recommended lubricant.
- Check that all mounting hardware of the gate operator is properly tighten.
- Ensure that the gate moves freely.
- Check for corroded parts and replace if necessary.
- Check the battery for the following:
  - Battery connections must be free of corrosion.
  - Battery voltage must be 26 VDC (fully charged battery).

Reconnect the Power Harness for the Control Board (refer to page 17)

- Check and confirm the proper operation of all safety devices (photoelectric eye, edge sensors or like).
- Check and confirm the operation of all installed accessories.
- Check and confirm the operation of all special features such as the Intelligent Obstruction Sensor, Hold Open Timer (refer to page 20 to 27)
- Check and confirm the operation of the manual release (refer to page 7)
- Verify battery backup functionally by turning off the power source (120 VAC and 220 VAC). DO NOT FORGET TO TURN ON THE POWER SOURCE AFTER VERIFICATION.

## GENERAL SAFETY PRECAUTIONS

The following precautions are an integral and essential part of the product and must be supplied to the user. Read them carefully as they contain important indications for the safe installation, use and maintenance.

- These instruction must be kept and forwarded to all possible future users of the system.
- This product must be used only for that which it has been expressly designed.
- Any other use is to be considered improper and therefore dangerous.
- The manufacturer cannot be held responsible for possible damage caused by improper, erroneous or unreasonable use.
- Avoid operating in the proximity of the hinges or moving mechanical parts.
- Do not enter the path of the moving gate while in motion.
- Do not obstruct the motion of the gate as this may cause a situation of danger.
- Do not allow children to play or stay within the the path of the moving gate.
- Keep remote control or any other control devices out of the reach of children, in order to avoid possible involuntary activation of the gate operator.
- In case of break down or malfunctioning of the product, disconnect from the main power source. Do not attempt to repair or intervene directly, contact only qualified personnel for repair.
- Failure to comply with the above may create a situation of danger.
- All cleaning, maintenance or repair work must be carried out by qualified personnel.
- In order to guarantee that the system works efficiently and correctly it is important to have the manufacturer's instructions on maintenance of the gate and operator carried out by qualified personnel.
- In particular, regular checks are recommended in order to verify that the safety devices are operating correctly.

All installation, maintenance and repair work must be documented and made available to the user.

Installer:

Signature

Date

Contact:






# TERMINOLOGY

## UL325 Gate Operator Classification

### GLOSSARY


#### RESIDENTIAL VEHICULAR GATE OPERATOR

CLASS I – A vehicular gate operator (or system) intended for use in a home of one-to four single family dwelling, or a garage or parking area associated therewith.

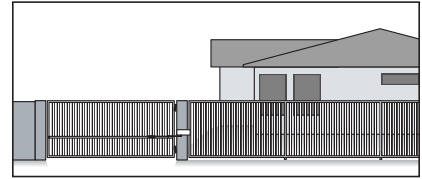


#### COMMERCIAL/GENERAL ACCESS VEHICULAR GATE OPERATOR

CLASS II – A vehicular gate operator (or system) intended for use in a commercial location or building such as a multi-family housing unit (five or more single family units), hotel, garages, retail store, or other building servicing the general public.

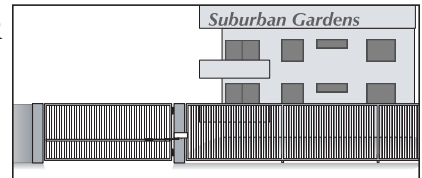


#### INDUSTRIAL/LIMITED ACCESS VEHICULAR GATE OPERATOR

CLASS III – A vehicular gate operator (or system) intended for use in an industrial location or building such as a factory or loading dock area or other locations not intended to service the general public.

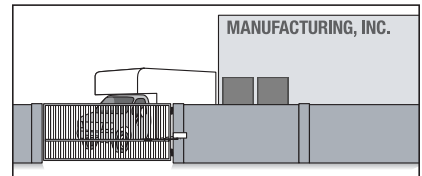

#### RESTRICTED ACCESS VEHICULAR GATE OPERATOR

CLASS IV – A vehicular gate operator (or system) intended for use in a guarded industrial location or building such as an airport security area or other restricted access locations not servicing the general public, in which unauthorized access is prevented via supervision by security personnel.

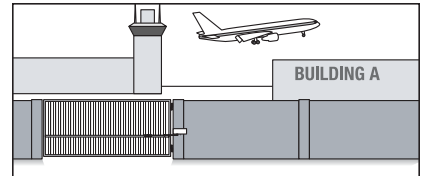

Install the gate operator only when:

The operator is appropriate for the construction of the gate and the Usage Class of the gate.



# IMPORTANT SAFETY INFORMATION

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## Photo Beam (non-contact sensor) Installation



Photo beams or like must be installed to reduce the risk of entrapment.

Use only UL325 compliance devices like:

**Omron E3K-R10**

Ensure that any device installed is UL325 compliant and low voltage device (24 VDC).

Read the device manual for proper installation, and proper connection (especially the polarity of the device).

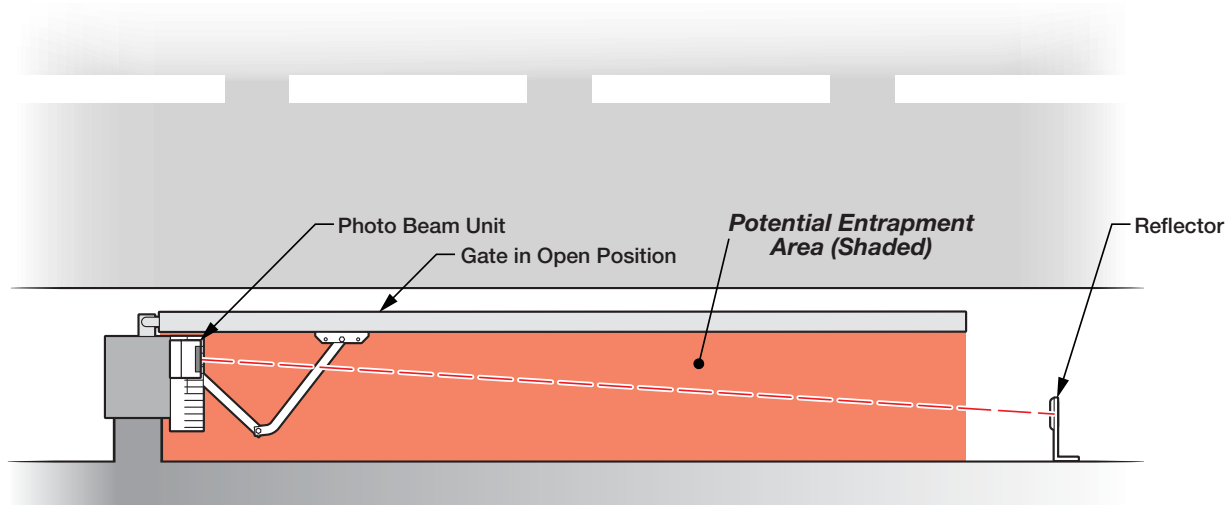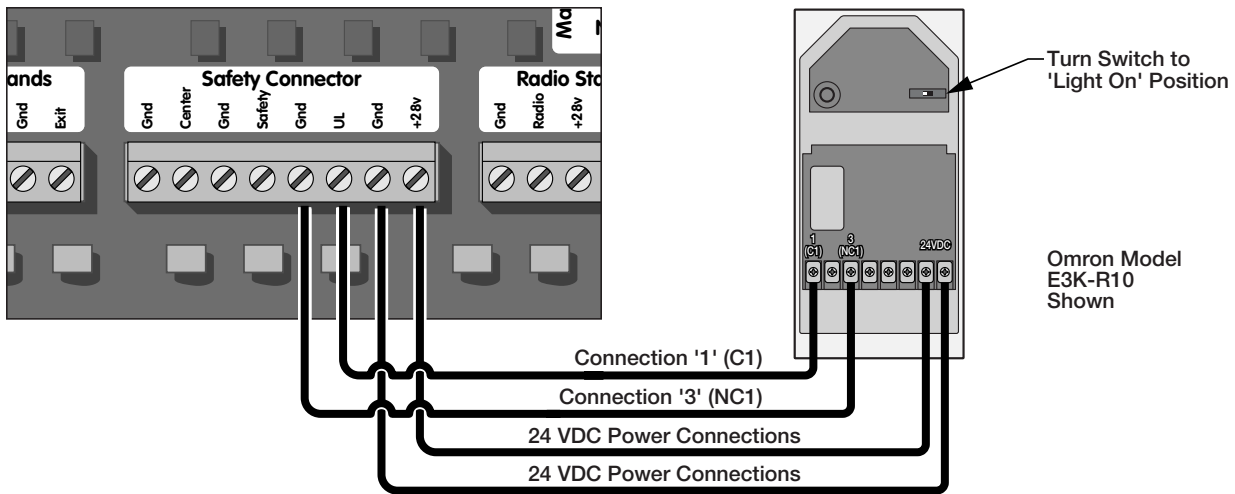

One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier.

Consult the installation manual for the UL325 device (photo beam or like) for detail information about the usage, installation and maintenance






# IMPORTANT SAFETY INFORMATION

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## Edge Sensor (contact sensor) Installation

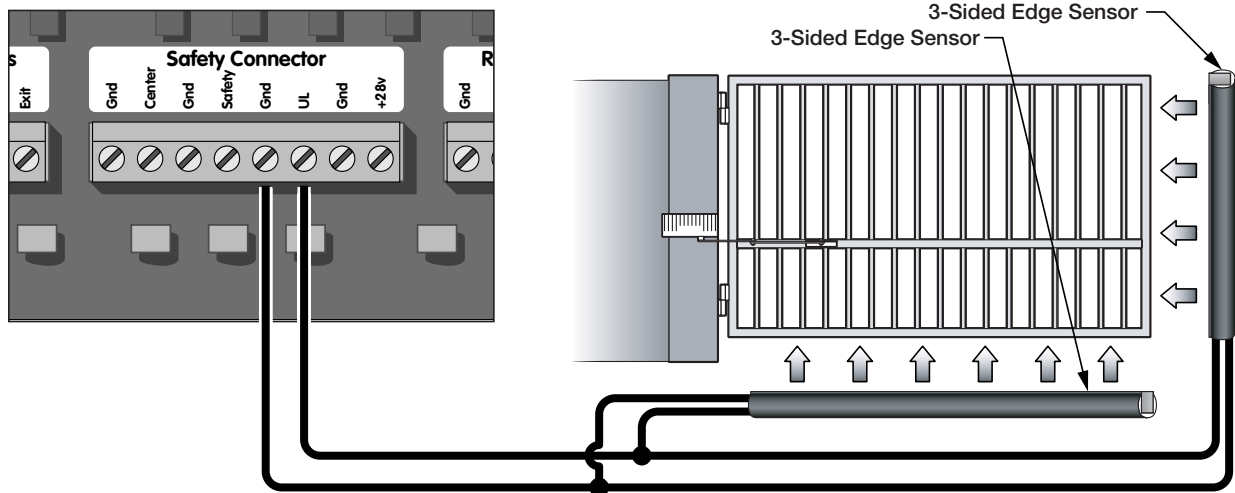

Edge sensor or like must be installed to reduce the risk of entrapment.

Use only UL325 compliance devices like: Use only UL325 compliance devices like: Miller Edge 3-sided activation for an added measure of protection MGR20 or MGS20

If you install another device:

- Ensure its compliance with UL325,
- Use the recommended supply voltage,
- Follow the installation guidelines of the device.

One or more contact sensors shall be located on the inside and outside leading edge of a swing gate. Additionally, if the bottom edge of a swing gate is greater than 6 inches (152 mm) above the ground at any point in its arc of travel, one or more contact sensors shall be located on the bottom edge.

Consult the installation manual for the UL325 device (photo beam or like) for detail information about the usage, installation and maintenance.


## Manual Release

When manual operation is required:

Remove the cover, locate the chained key and turn the key to push the locking-pin down.

At end of operations, lock the geared motor again by releasing locking-pin.

**Attention: Lock and release operations MUST be performed with motor NOT RUNNING.**

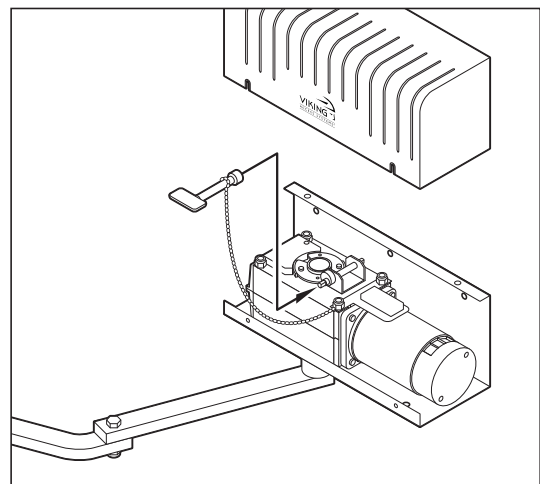

# IMPORTANT SAFETY INFORMATION

**WARNING - Not following these instructions may cause severe injury or death to persons.**

## Audible Alarm Reset Switch Installation



### Reset for the Audible Alarm

UL325 standard requires an audible alarm to go off after two consecutive events detected by the primary entrapment protection of the gate operator (obstruction sensor).


The audible alarm will continue to sound for 5 minutes or until a stop command gets actuated.

The Stop command can be actuated in two different forms

1. Using the built in stop switch in the control board or
2. Using an external stop button within the sight of the gate, away from moving parts of the gate and out of reach of children.

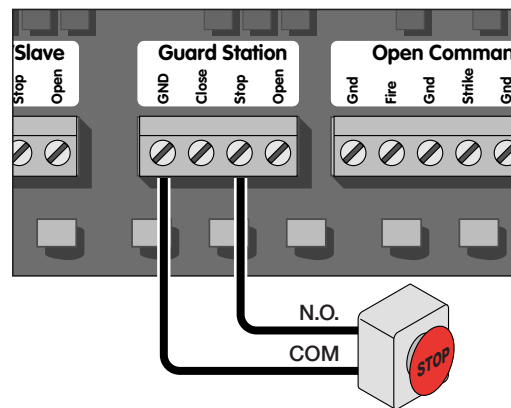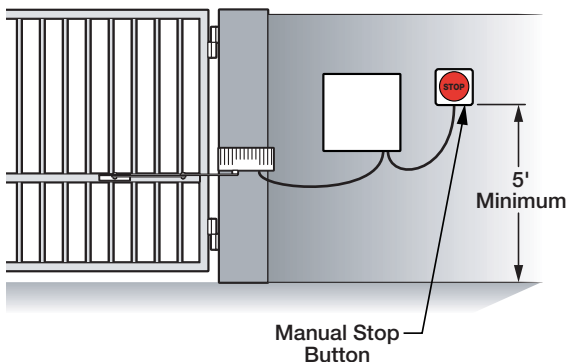

## Warning Placard Installation

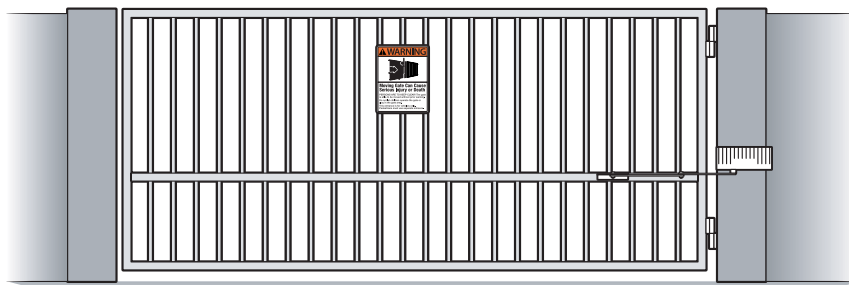

All warning signs and placards must be installed where visible in the area of the gate. A minimum of two placards shall be installed. A placard is to be installed in the area of each side of the gate and be visible.



# IMPORTANT INSTALLATION INFORMATION


**CAUTION - FOR USE WITH GATES OF A MAXIMUM OF 12 FT IN LENGTH AND 500 LBS. IN WEIGHT.**  
**WARNING - TO REDUCE THE RISK OF SEVERE INJURY OR DEATH TO PERSONS:**





This is NOT a pedestrian gate operator



Do NOT Install the gate operator to lift gates

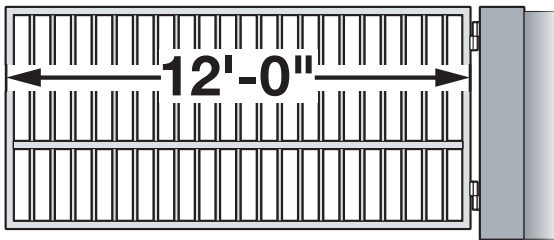

12' maximum gate length

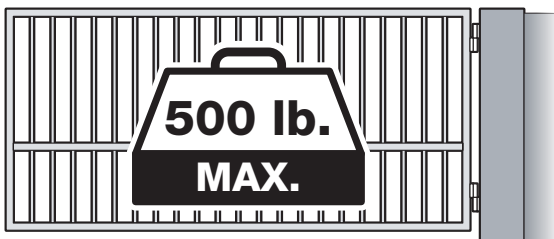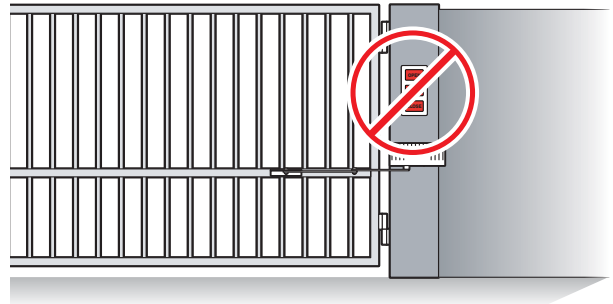

500 pounds maximum gate weight

Locate Control Buttons:

1. Within sight of the gate,
2. At a minimum height of 5 feet so small children are not able to reach it, and
3. Away from all moving parts of the gate.

## Specifications

|                                |   |
|--------------------------------|---|
| Maximum Gate Length:           | 12 feet   |
| Maximum Gate Weight:           | 500 lbs.  |
| Maximum Aperture Angle:        | 130 deg.  |
| Power Requirements:            | 120 VAC Single Phase at 2 Amps<br>Or<br>220 VAC Single Phase at 1 Amp |
| Maximum Operating Temperature: | 70°C (158°F)  |



# PLAN OF INSTALLATION - OPEN INSIDE

The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment.

Swinging gates shall not open into public access areas.

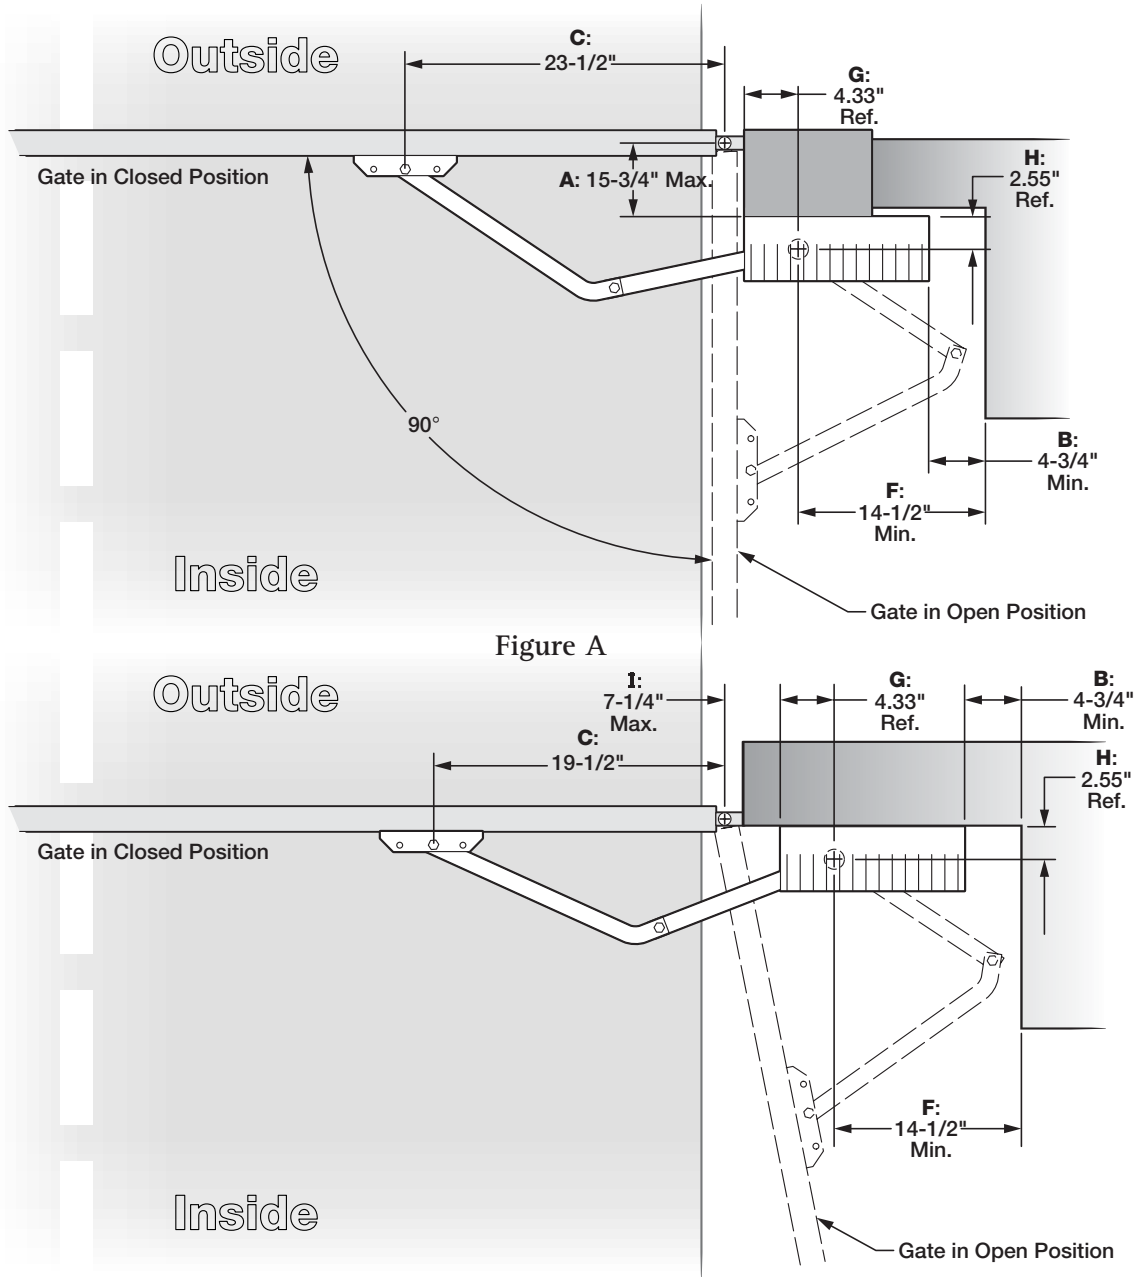


Figure B  
Open Inside Plans of Installation

Note: Varying from the dimensions shown may severely affect the speed and performance of the gate operator.



# PLAN OF INSTALLATION – OPEN OUTSIDE

The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment.

Swinging gates shall not open into public access areas.

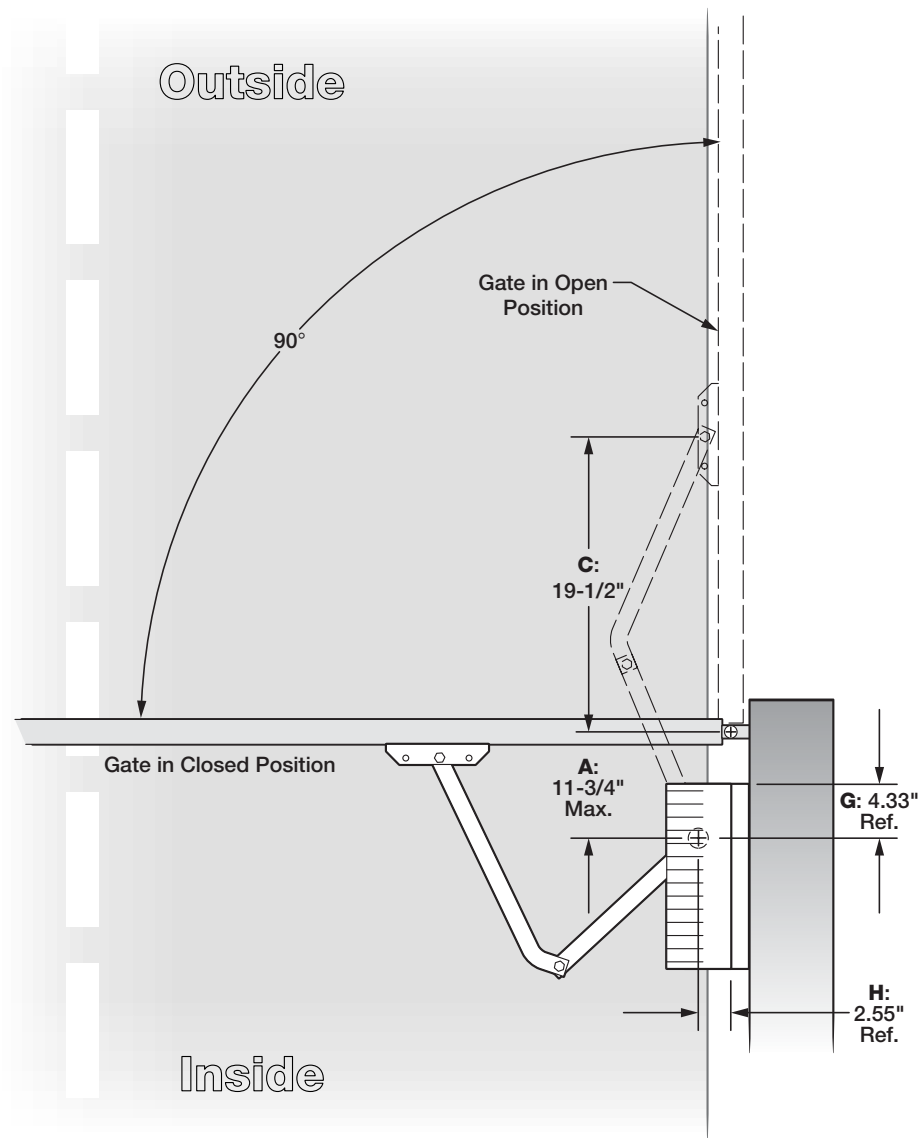



Figure C  
Open Outside Plan of Installation

Note: Varying from the dimensions shown may severely affect the speed and performance of the gate operator.



# GATE OPERATOR INSTALLATION


**CAUTION** - If mounting bar is not welded to a frame member that runs the full length of the gate, the gate operator may damage the gate. Do not weld the bar or backing plate to a few pickets.

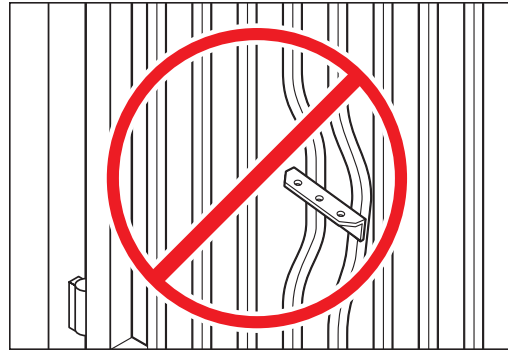

## STEP 1

Check the integrity of the gate structure and sufficiently sturdy such as pivot points are properly lubricated and surfaces are free of rust.


- Remove the Motor/Gear Assembly from its package. NOTE - The cover is not secured.
- Disassemble the geared motor from the mounting chassis.

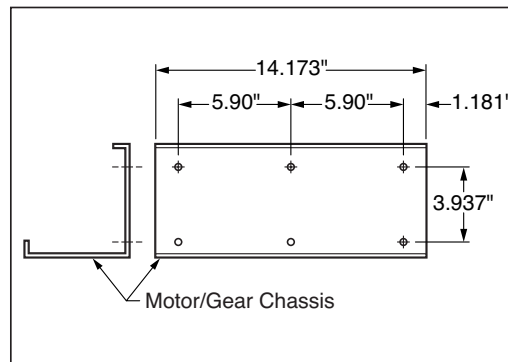

## STEP 2

Position the pivot bracket in accordance with figure A, B or C on page 10 or 11 and the drawing at the right.


Tack weld the bracket in place. For non-ferrous gates the bracket can be bolted in place.

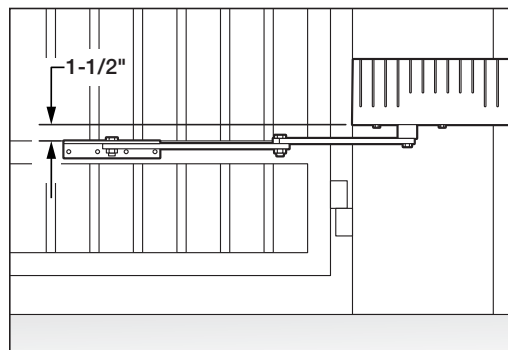

## STEP 3

**Chassis Installation:**

Chassis can be welded to the gatepost. In the case of a non-ferrous post, anchoring the chassis may require an additional embedded bracket or special anchoring hardware to ensure the longevity of the installation.

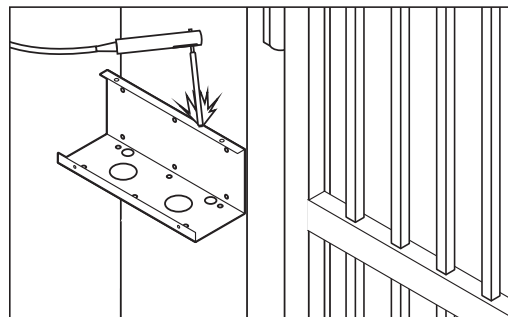

**Note:** Depending on type of anchor used, it may be required to enlarge the holes in the mounting chassis.






# GATE OPERATOR INSTALLATION

## STEP 4


Remount the geared motor on the chassis accordingly.

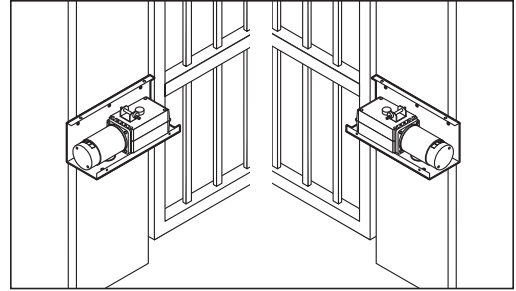

## STEP 5

Attach the articulated arms to the pivot bracket and the Motor/Gear Assembly.

NOTE - With the arms at their most extended position, make sure the two arms do not go past the straight position. Additional holes are provided in the pivot bracket to assist with proper installation

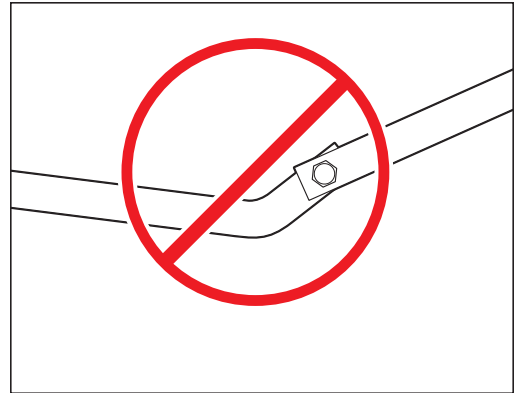


## STEP 6

With the cover off, perform the Manual Release procedure as shown at the bottom of page 7. The gate can now be moved manually.


Ensure that the gate and gate operator move freely.

Once it is determined the operator will work properly, remove the operator and complete the welding process.

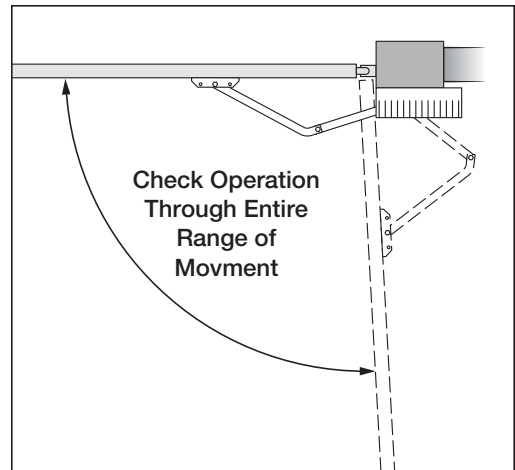

## STEP 7

Remount the gate operator. Lubricate the moving parts (the bushings on the articulated arm) and tighten the self-locking nuts in such a way as to not block arm movement. Leave the cover off until the limit switches have been adjusted.

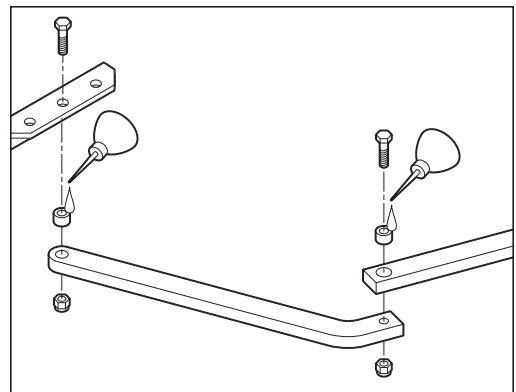

# GATE OPERATOR INSTALLATION


## Limit Switch Setup

### STEP 8

Loosen the screws on the limit switch cams and position the cams to the desired locations. There are additional holes provided in case of a wide or tight angle of opening or closing.

Move the gate manually and ensure that the limit switch gets actuated at the desired open and closed position. The limit switch will click when engaged by the limit cam.


Retighten the screws on the limit switch holders once the proper position has been determined. **CAUTION – DO NOT OVERTIGHTEN SCREWS!**

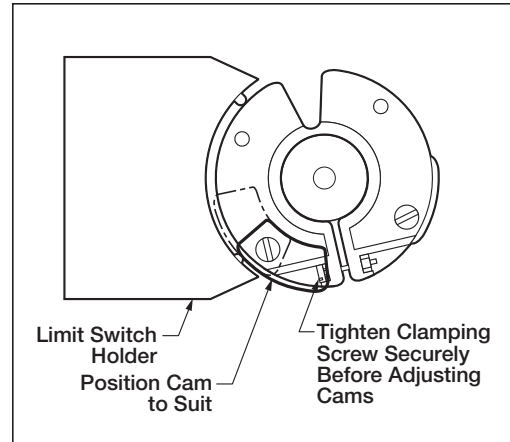

Note: Leave cover off until after the installation of the control box and the electrical installation. Verify that the operator opens and closes to the desired position under power. Make any adjustments as necessary.

### STEP 9

Replace the cover and secure it with screws provided after finishing final adjustments.

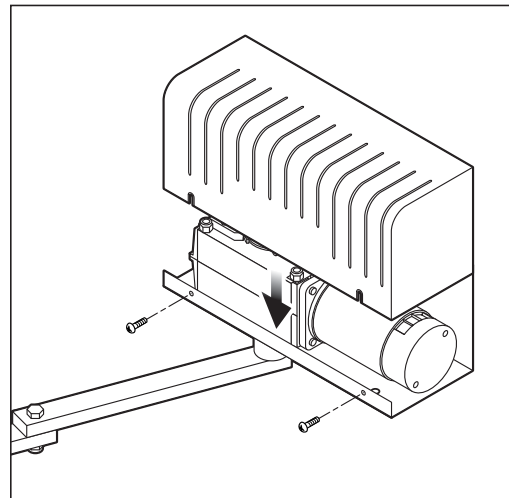

# GATE OPERATOR INSTALLATION

## Opening/Closing Setup:

To have the gate operator slow down prior to reaching its limits use the following steps:

1. Setup the limit switches manually at the desired open and close position.
2. Allow the gate operator to run a full open and close cycle (from limit to limit) without interruption.

Note: During the first full open and close cycle: The gate operator doesn't slow down prior to reaching its limits. During subsequent cycles: The gate operator will slow down prior to reaching its limits.


3. Verify that the gate opens and closes to the desired position.

To change the open or close limit position(s) the following steps MUST BE taken:

A. Reset the gate operator by performing one of the following steps:


- i. Disconnect the power harness or
- ii. Disconnect the motor harness or
- iii. Actuate both limits at the same time

B. Repeat steps 1,2 and 3.

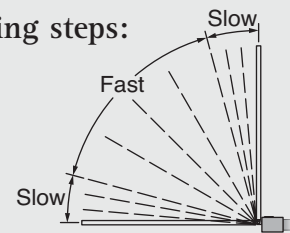

## Reference Wiring Diagram


Connect the lead wires as shown

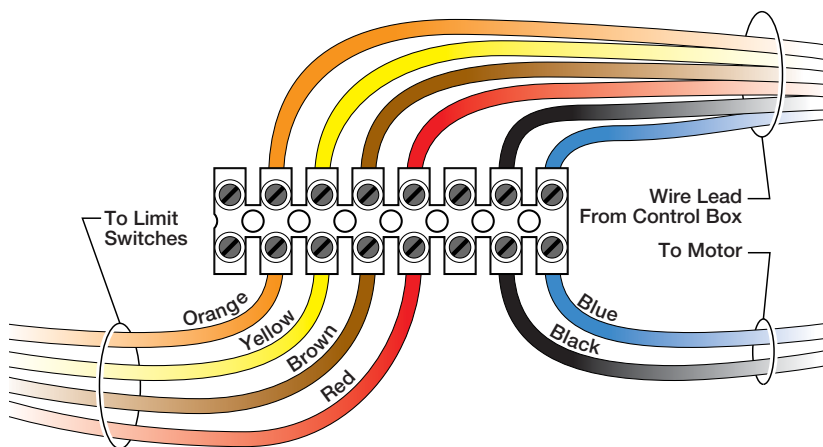

Note: Use this wiring diagram as a guide to connect the wires to the motor unit.

## Limit Switch Connections


The Limit Switches are wired as shown

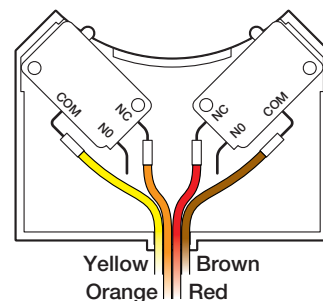


# CONTROL BOX INSTALLATION

**WARNING** - If the control box is not mounted properly it may fall, causing damage and/or injury. The control box weight is approximately 40 lbs. Be sure that the substrate being mounted to and the fasteners being used are appropriate to support the weight of the control box.


1. Remove the control board mounting plate. The plate is held in the box by four screws.

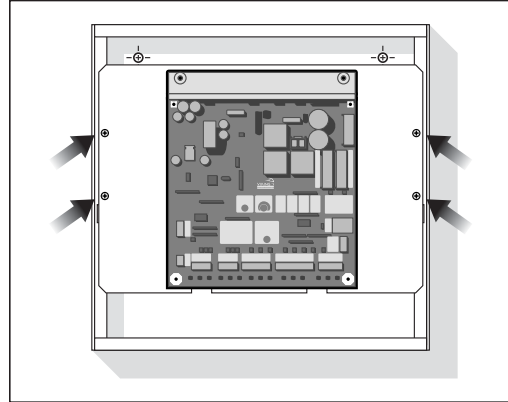

2. Position the control box in the desired place and mark the mounting holes. Prepare the holes to receive the anchors/fasteners.

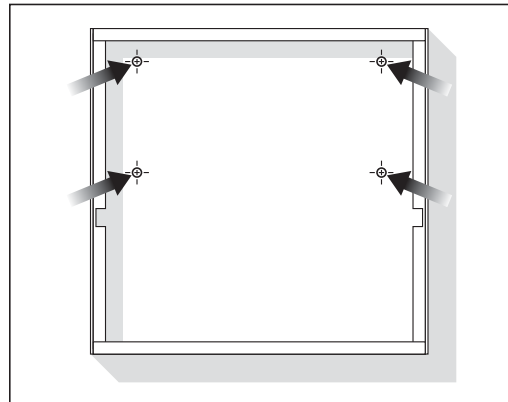

3. Position the control box and secure it to the mounting surface using the sealed washers provided (place the rubber side of the washers against the inside of the control box).

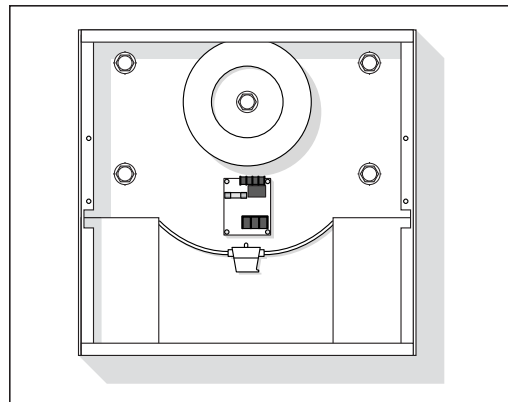

**Note:** Depending on type of anchor used, it may be necessary to enlarge the mounting holes in the control box.

# ELECTRICAL INSTALLATION

**Caution – Do not connect the power harness to the board until the installation is ready for verification.**

The G-5 Gate Operator requires a single phase AC line to operate and charge the batteries.




1. Turn off the main switch or breaker for the power line being used.
2. Move the selector switch on the Incoming Voltage Selector to the proper position (115 for 110 to 120VAC, 230 for 200 to 240VAC).
3. Connect the incoming power wires to the terminals as shown in the illustration.
4. Turn on the main switch or breaker once the installation is ready for performance check and adjustments.

## Tips for proper ground installation

A good ground in a gate operator installation will minimize or prevent damage to the operator cause by natural events such as lightning strikes.

The following will provide a guideline for proper grounding:


1. Use a ground rod to provide a ground reference.
2. Consult your city code and be aware of under-ground services in the site of the gate operator to prevent inconveniences.
3. Use always a single bonding point for grounding.
4. All ground wires must be as short and as thick as possible.
5. Prevent unnecessary turns or loops in all ground wires.

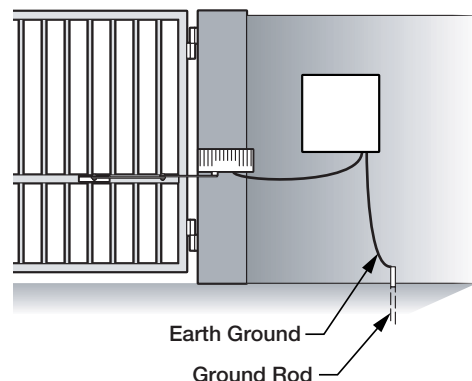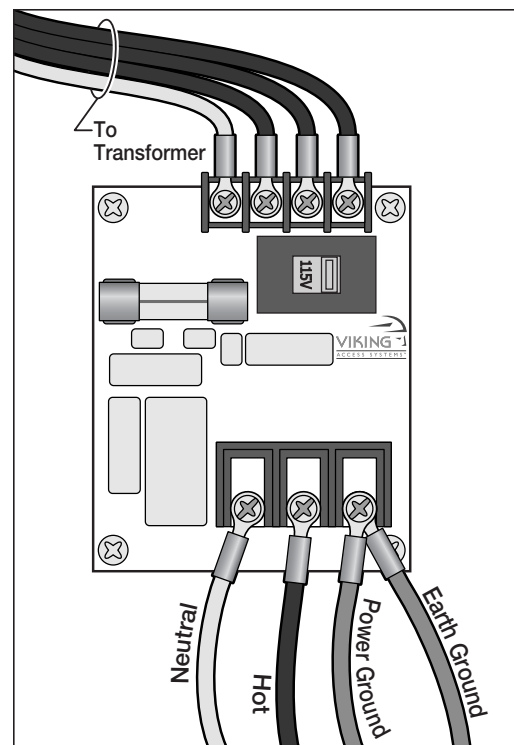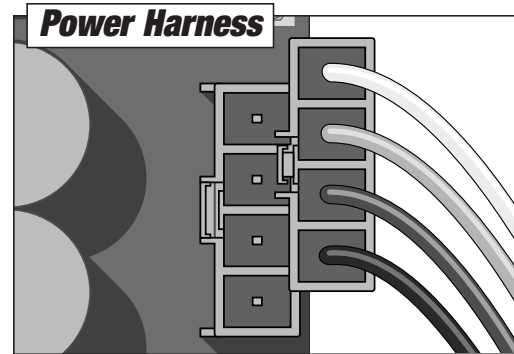





# ***ELECTRICAL INSTALLATION – SINGLE UNIT***

## Single Unit Connections

Connect the wires from the motor unit to the terminal block mounted next to the control board. Match wire colors to the terminal block.

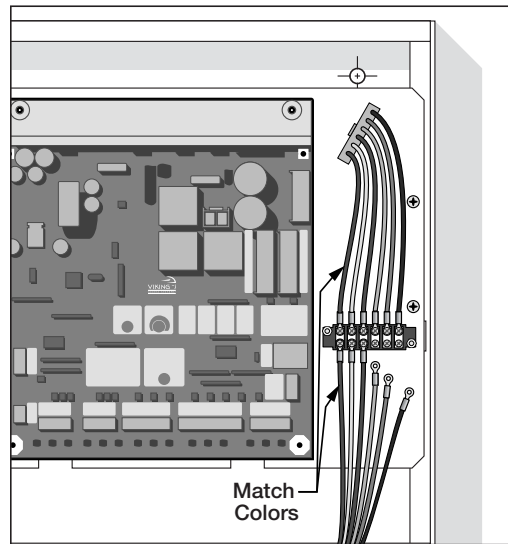

Connect the wire harness to the “OPEN RIGHT” connector if the gate opens towards the right side. Connect the wire harness to the “OPEN LEFT” connector if the gate opens towards the left side.

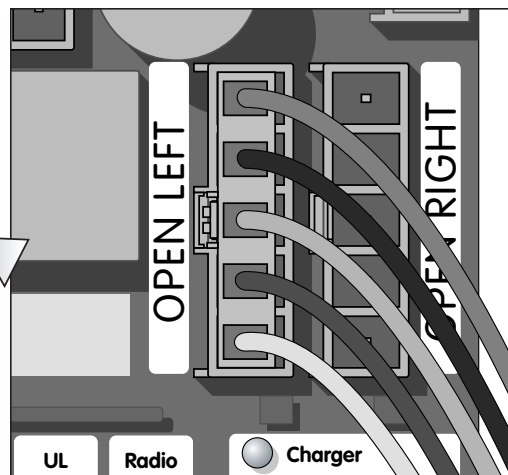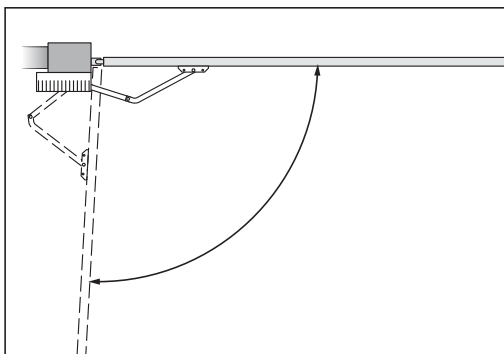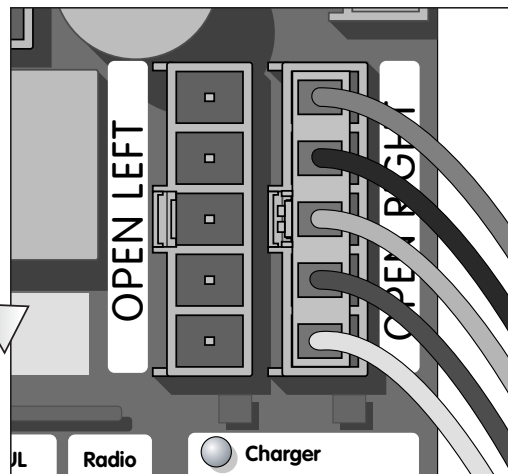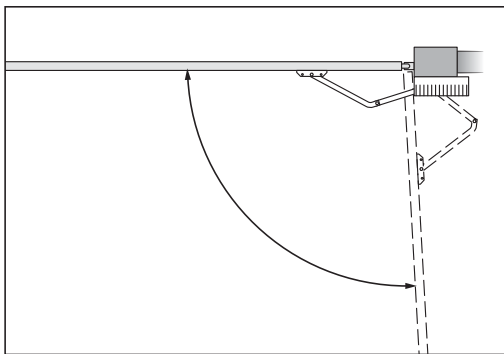






# ***ELECTRICAL INSTALLATION – MASTER/SLAVE***

## Master/Slave Connections


A Master/Slave control board is available, when required, to run two gate operators in synchronous mode.

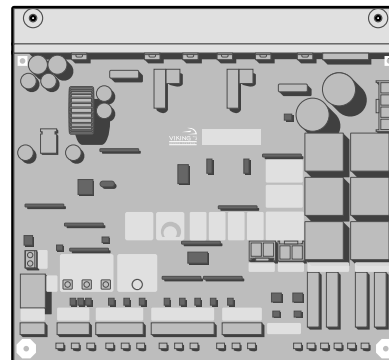


Using the connectors provided insert the wires from the motor units as shown in the diagram below. Insert the connectors in the proper receptacles (Master or Slave, Open Inside or Outside).

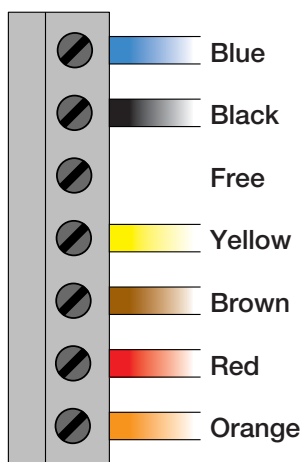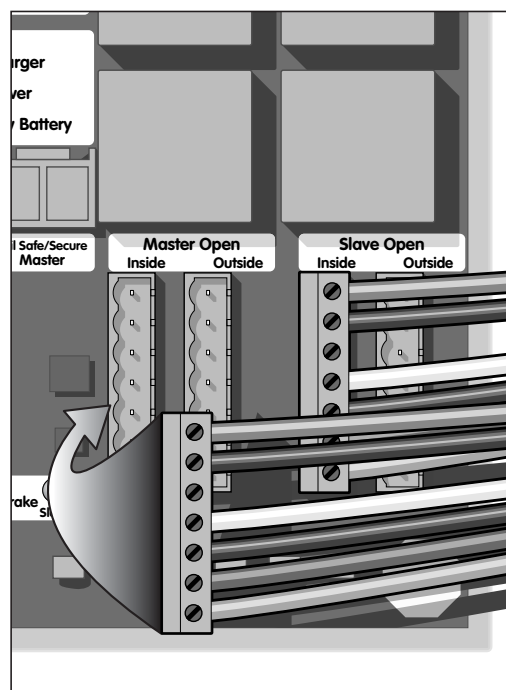

## VEHICULAR LOOP DETECTOR INSTALLATION

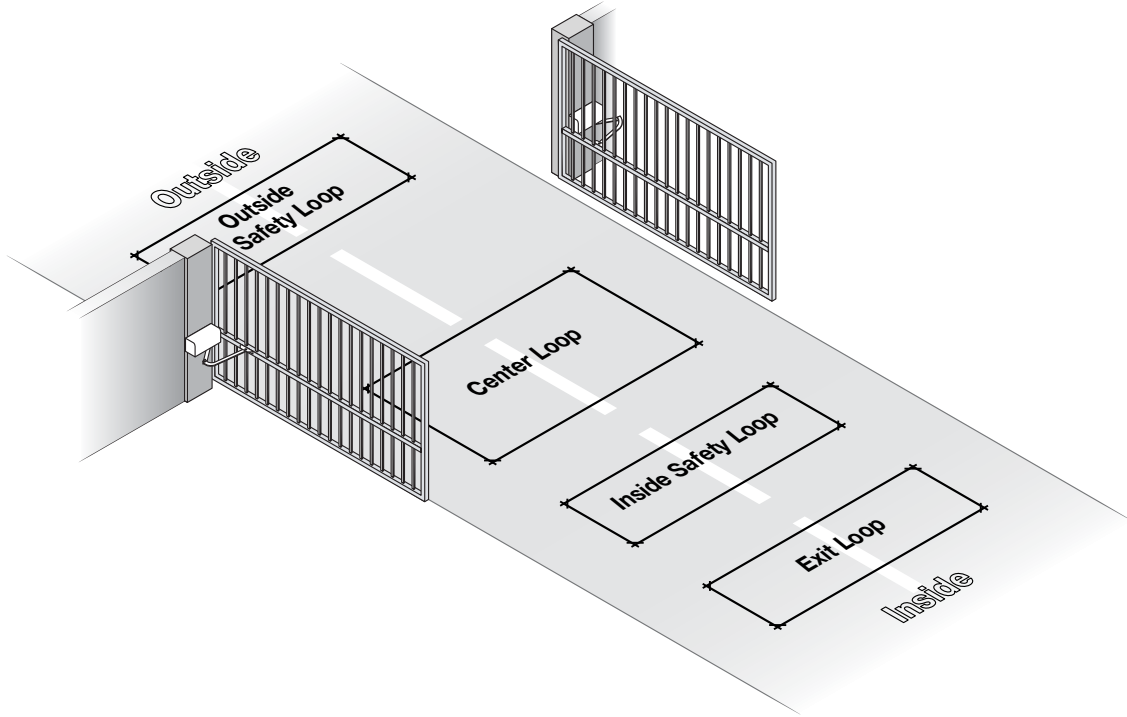

**Dimension A** – 5' for Single Gate Operator  
6' for Master/Slave Gate Operator

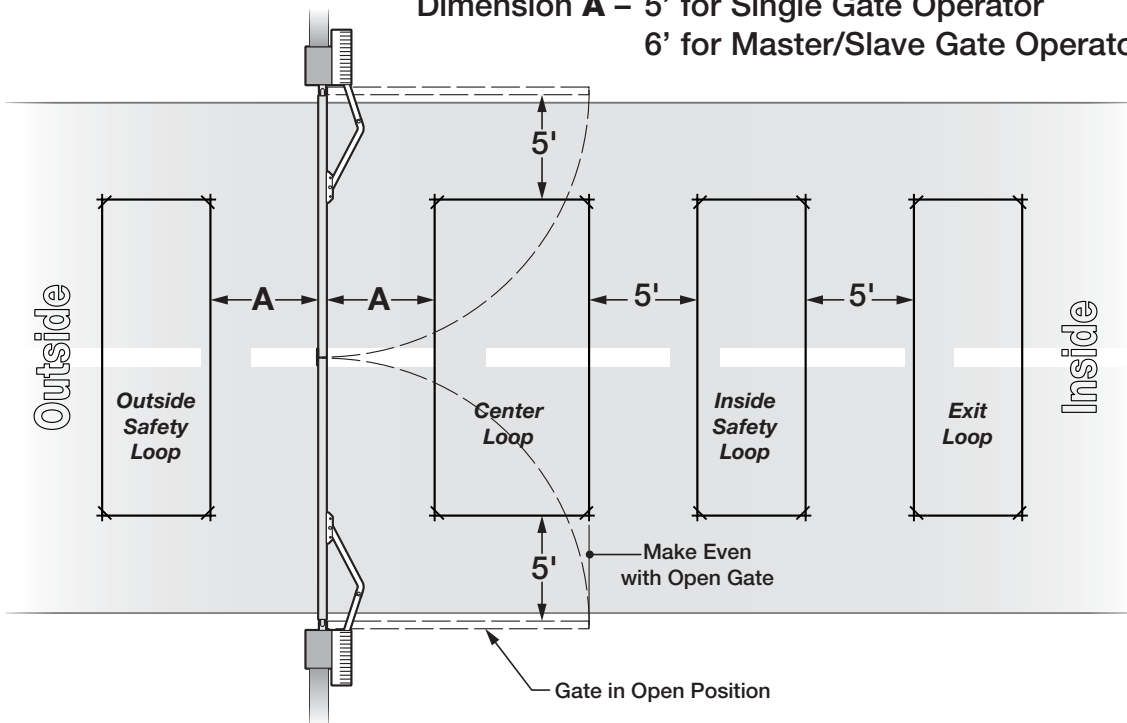

# VEHICULAR LOOP DETECTOR INSTALLATION


**WARNING**—Consult the installation instructions from the loop detector manufacturer. The following statements are provided as a guide but different requirements may be required by the vehicular loop detector manufacturer.

## Guidelines for Vehicular Loop Detector Installation

1. Prevent sharp corners in the geometry of the loop sensor.
2. Install the appropriate number of turns for your loop geometry based on the loop perimeter. Use Table C (below) as a guide.
3. Use XLP (cross-linked-polyethylene) type of wire. This wire reduces the effects of moisture and other environmental events in altering the functionality of the vehicular loop detector.
4. Twist the lead wire at least 6 turns per foot.
5. Use BACKER-ROD to minimize damage to the loop detector wire prior to using the sealant.
6. Place the loop detector wire and adjust the sensitivity of the vehicular loop detector unit in a way to minimize the effects of the gate over the loop detector wire.


**IMPORTANT** – Some of the following parameters may affect the proper functionality of the vehicular loop detector (consult the installation manual and the manufacturer of the vehicular loop detector).

- Gate size,
- Number of turns in the loop sensor wire;
- Distance from the loop sensor wire to the gate either at the open or close position.

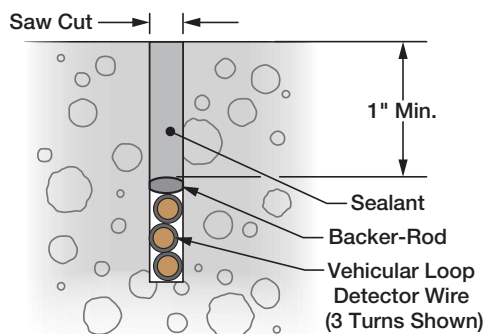


**Table C – Recommended Number of Turns**

| Perimeter in Feet | Number of Turns |
|-------------------|-----------------|
| 10                | 5               |
| 20                | 4               |
| 30-40             | 3               |
| 50-100            | 2               |

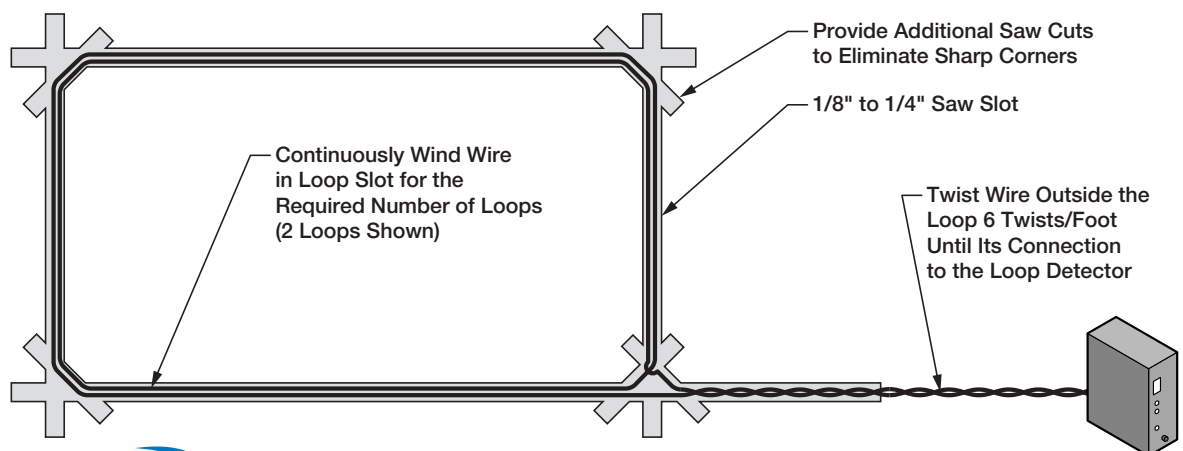

# ACCESSORY CONNECTIONS

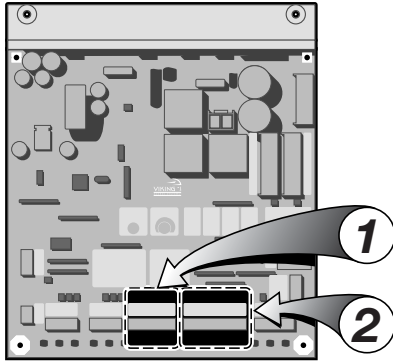


Connection Locations  
(Single Unit Board shown)

Vehicle loop detectors must be installed to decrease the possibility of vehicle entrapment on the gate (see page 20).


The SECONDARY ENTRAPMENT PROTECTION like the edge sensor and the photoelectric beam MUST BE PART OF EVERY SINGLE INSTALLATION to prevent pedestrian or animal entrapment (see pages 6 and 7).

The edge sensor and/or the photoelectric beam must be UL325 compliant devices.

## Open Commands

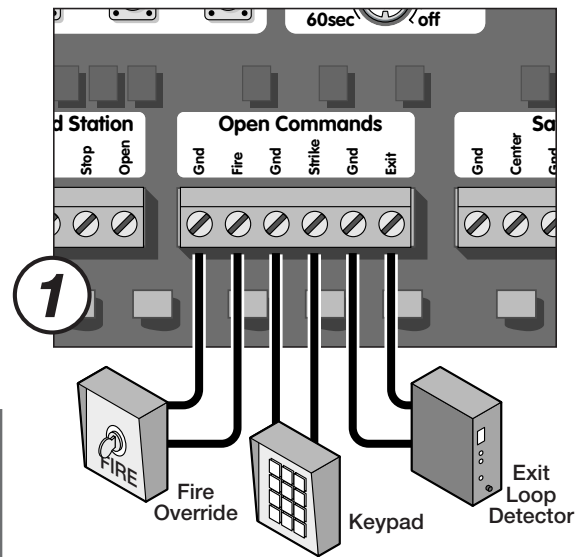



## Safety Connections

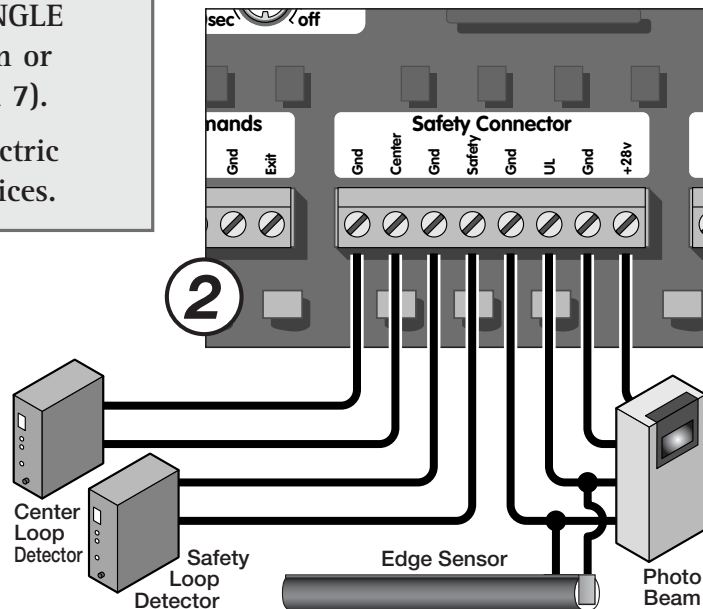


# ACCESSORY CONNECTIONS

## Radio Receiver

When connecting the Radio Receiver carefully verify the proper connections. The maximum voltage that the control board provides for external accessories is the maximum voltage of the battery, which is about 28 volts. In the event of an electrical short the board will protect itself by shutting down and will remain shut down until the short is corrected.

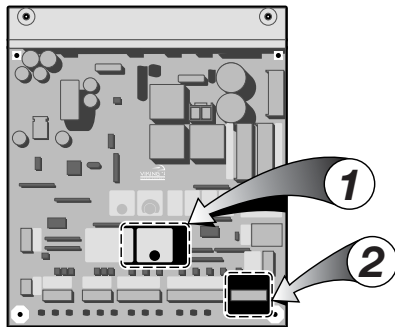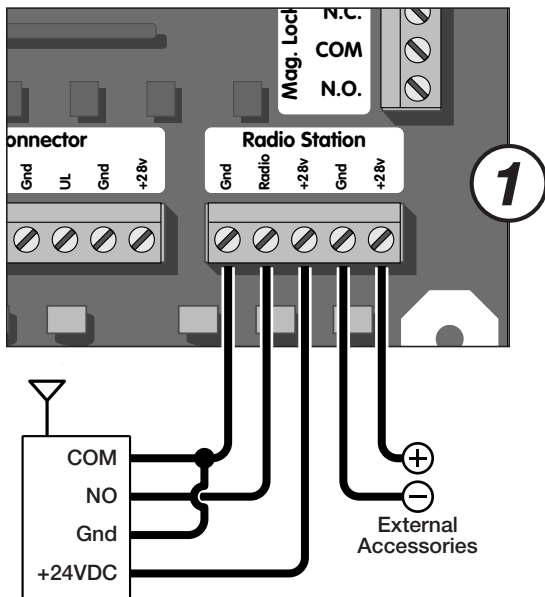

Connection Locations  
(Single Unit Board shown)

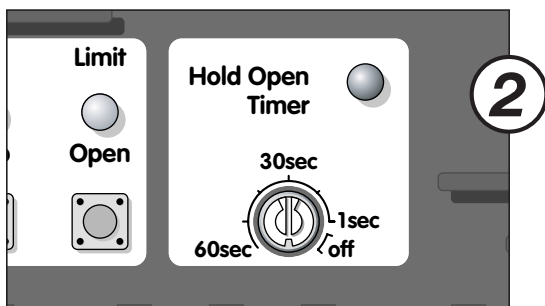

The control board provides two modes of operation that a radio receiver can control the gate:

### **Open-Stop-Close**

1. By having the radio receiver connected as illustrated and with the Hold Open Timer OFF (see below):

Every command of the radio transmitter will control the gate as follow:

- a) First command opens the gate,
- b) Second command stops the gate and
- c) Third command closes the gate
- d) Any subsequent commands will continue in the same order to control the gate.

This type of configuration is not recommended for a commercial installations.

### **Open Only**

2. By having the radio receiver connected as illustrated and with the Hold Open Timer ON (see below):

Each command of the radio transmitter is ALWAYS AN OPEN COMMAND to the gate.

## Hold Open Timer


The Hold Open Timer function holds the gate at the open position for a predetermined amount of time, prior to closing automatically. Set the Timer to the desired time, from 1 to 60 seconds.

If this feature is not needed, turn the Trim Pot clockwise to the "off" position.

Note: The Hold Open Timer affects the "radio receiver command" and the sequence of operation for the gate (see page 23).



# ACCESSORY CONNECTIONS

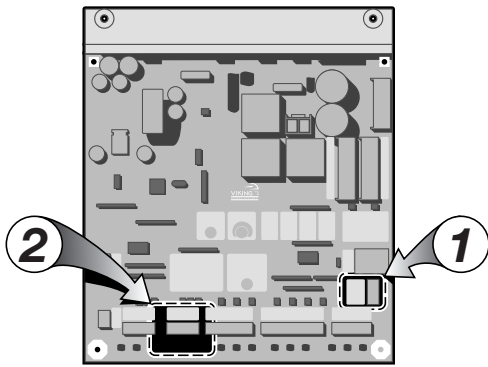


Connection Locations  
(Single Unit Board shown)

## Magnetic Lock

External supply for the magnetic lock must be provided. This will prevent rapid drainage of the battery in the event of power failure.


Relay Contact 10A-250VAC

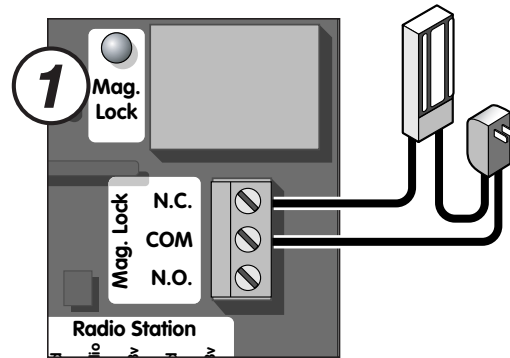


## Solenoid Connection

External supply for the solenoid connection must be provided. This will prevent rapid drainage of the battery in the event of power failure.

Relay Contact 10A-250VAC

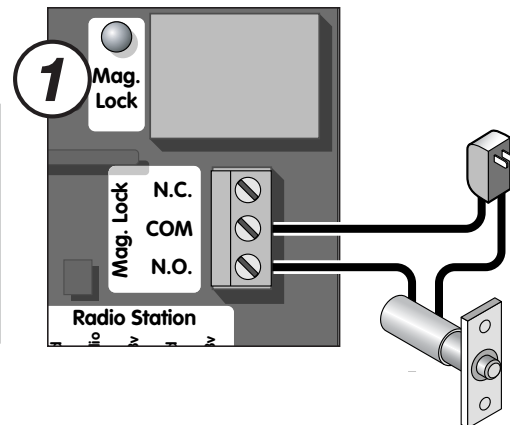

## Guard Station

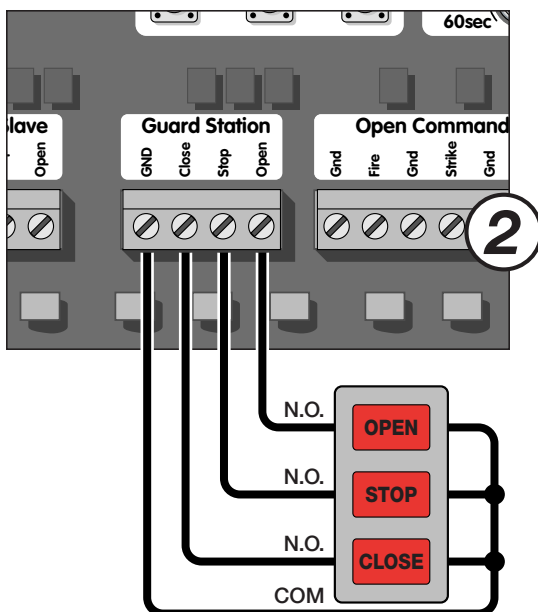

The guard station provides control of the gate operator to open, stop and close the gate.

All three switches must be Normally Open type of switch, and can share the same common (ground).


Place the control switch box within sight of the gate, away from moving parts of the gate and out of reach of children.





# SPECIAL FEATURES

## Intelligent Obstruction Sensor (Primary Entrapment Protection)

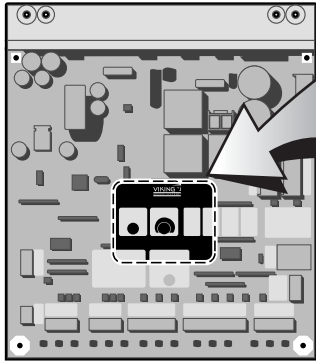


Trim Pot Location  
(Single Unit Board shown)



Turning the Trim Pot clockwise increases the sensitivity.

Turning the Trim Pot counter-clockwise decreases the sensitivity.

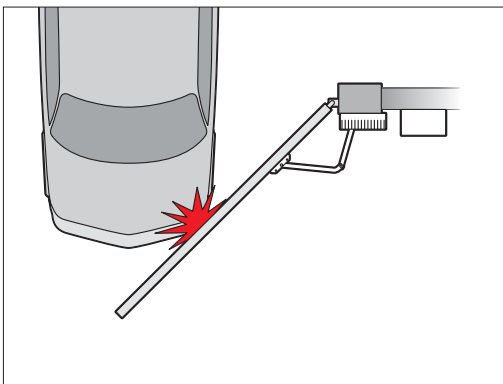

The Obstruction Sensor detects obstructions in the path of the traveling gate. The Trim Pot for the Obstruction Sensor adjusts the sensitivity level that triggers the Sensor.

When the Obstruction Sensor detects an obstruction it will:

1. Stop the gate's movement and reverse it momentarily.
2. Bring the gate to a resting position.
3. Disable the Hold Open Timer feature until the Gate Operator receives a new command.

If another obstruction is detected before the gate reaches either limit it will:

1. Stop the gate's movement.
2. Bring the gate to a resting position.
3. Disable the Gate Operator.

UL325 standard requires an audio alarm to go off after two consecutive entrapment events sensed by the Inherent Entrapment Protection of the Gate Operator.

The audio alarm will sound for a period of 5 minutes or until the "Stop" Button is pressed (see page 8 for remote installation of a "Stop" Button).






# SPECIAL FEATURES


## Gate Overlap Setting

Setting the Overlap Delay Pot to “0” will cause the master and the slave units to open and close at the same time

A Master/Slave control board is required to operate two gates with a single controller.

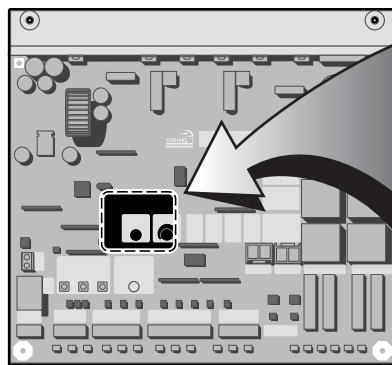


Trim Pot Location  
(Master/Slave Unit Board shown)

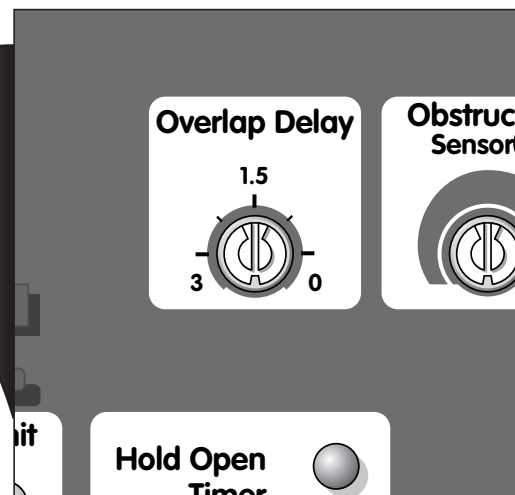

Setting the Overlap Delay Pot to any value other than zero will cause the master unit to delay in opening.

The time delay can be set for up to 3 seconds.

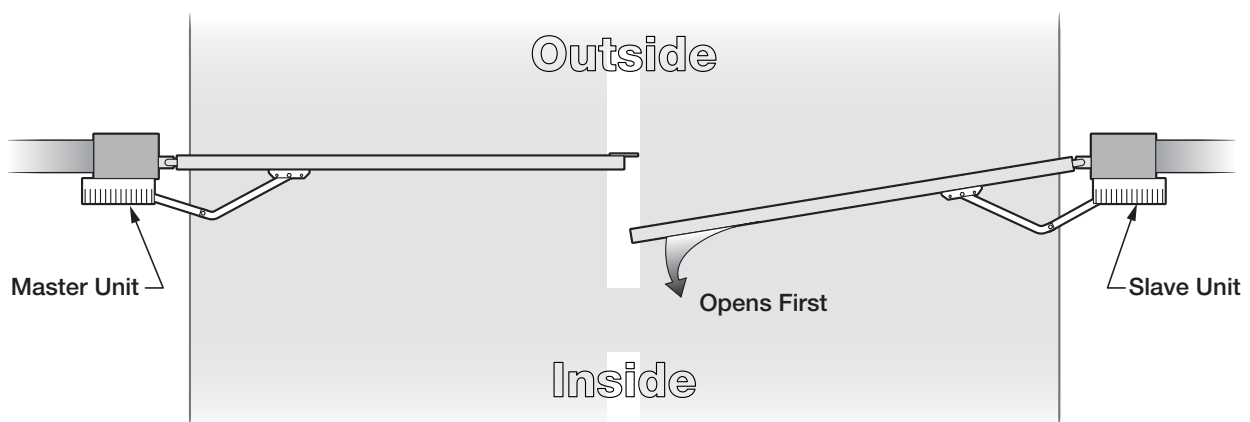

# TROUBLESHOOTING

## Gate does not run – Motor Sensor indicator comes ON

Check all motor connections to be fully engaged. Refer to page 18 and 19.

Ensure that the motor connections are:  
a) Properly connected,  
b) Tight enough and  
c) Color coded  
Refer to page 15.

Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Refer to page 15.

Check the 15 Amp fuse in the control board

## Gate does not run – Motor Sensor indicator is OFF

Check all motor connections to be fully engaged. Refer to 15.

Check that limit switches are connected to the common and the normally close position refer to page 15.

Check that the stop command is not active. Refer to page 8 and 24

Check that the UL command (photo beam and/or edge sensor) is not active. Refer to page 6, 7 and 22.

Check that the vehicular loop detectors are working properly. Refer to page 20, 21 and 22.

Check that the radio command is not active. Refer to page 23.

Ensure that you external accessories are working properly.

Check the 4 Amps fuse in the control board

Ensure that you power cables are adequate in voltage and properly connected. Refer to page 17.

## Gate does not run – Power failure

Check the 15 Amp battery fuse. Refer to page 16

Check the battery connections and cables.

Check the voltage of the battery.

## Gate does not run – Obstruction sensor ON and audio alarm is SOUNDING

Ensure that the gate path is clear of obstructions.

Note: To stop the audio alarm, use the stop command. Refer to page 8 and 24.

## Gate runs, stops and reverse momentarily – Obstruction sensor ON and audio alarm OFF

Ensure that the gate path is clear of obstructions.

Check for proper functionality and lubrication of the gate and hardware (hinges and the like).

Adjust the trim pot of the obstruction sensor. Refer to page 25.

## Gate ignores the limit switches

Check that the open limit switch and close limit switch are in the corresponding place. Refer to page 15.

Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Refer to 15.

Ensure that the motor cable is away from sources of electrical interference, such as  
a) Electric motors  
b) Electric fences  
c) Power lines

Note: To minimize effects cause by electrical interference use twisted pairs of cables with the shield grounded.

Check that the limit switch is not faulty

Check that wires to the limit switch are not shorted.



# TROUBLESHOOTING

## Gate does not open or close

Check all motor connections to be fully engaged. Refer to page 15.

Check that limit switches are connected to the common and the normally close position refer to page 15.

Check that the stop command is not active. Refer to page 8 and 24.

Check that the UL command (photo beam and/or edge sensor) is not active. Refer to page 6, 7 and 22.

Check that the vehicular loop detectors are working properly. Refer to page 20, 21 and 22.

Check that the radio command is not active. Refer to page 23.

Ensure that you external accessories are working properly

## Automatic close does not function

Check that the trim pot of the hold open timer is set to the proper time delay. Refer to page 26.

Note: Hold open timer closes the gate automatically once the gate reaches the limit open.  
The time delay to close is set by the trim pot.  
To turn this system off turn the trim pot all the way clockwise

## Gate opens in the opposite desired direction

Verify your motor cable is connected to the proper connector. Refer to page 18 and 19.

Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Refer to 15.

## Gate does not open but after few seconds

Set the overlap delay trim pot to 0. Refer to page 27.

Note: Overlap trim pot is normally recommended to use in overlapping gates. Refer to page 27.

## Gate opens. Closes or stops on its own

Check that your external devices are working properly

Check that your wires from your accessories are:  
a) Not shorting together  
b) Not shorting a power line  
c) Not shorting to metal or earth ground.



# ***DISTINCTIVE FEATURES***

***UL325 and UL991 Listed by Underwriter Laboratories (UL)***

***Accessible Manual Release***

- Key operated mechanism

***Available in Aluminum Chassis***

***Easy Solution for Complex Installations***

***Elegant Design, appealing to any architectural project***

***High Impact and UV Protected Plastic Cover***

***Opening up to 130°***

***Speed: 10 to 13 Seconds per 90°***

***100% Duty Cycle Under Very Wide Temperature Range***

***Very Low Power Consumption***

- 800 cycles of operation on backup battery (500 lb. gate and 12' length).

***Intelligent Speed Control***

- Smooth start and stop, self-adjust system.

***Modulated Speed Regulator***

- Prevents exceeding operating speed that may reduce the service life of the gate operator and/or installation.

***Intelligent Obstruction Detection***

- Adjustable Sensitivity for the Obstruction Sensor.

***Overlap Delay***

- Holds one gate momentarily by an adjustable time while the other gate is operating (Master/Slave installation with overlap gates)

***Built-in protection against lightning strikes or similar electrical surges***

***Inherent Overload Protection in the regulated power supply for external accessories with multiple devices of protection.***

***Modular connectors for easy installation.***

***LED indicators for verification of operation.***



Corporate Headquarters  
631 Wald  
Irvine, CA 92618  
Technical Support 800-908-0884